



Digital Photo Album Quick Start Guide

START

1. CHARGE the device using the USB cable for 2-3 hours PRIOR TO USING. **DO NOT** charge device for more than 12 hours.
2. **DO NOT** unplug the device while Photo Viewer software on your computer screen is still open.

INSTALLATION

1. Place the mini-CD in the center ring of your disc drive, then wait for the prompt to install. If no prompt displays, go to "Start -> My Computer" and click on the disc labeled PHOTO ALBUMS.
2. Click on the file "SETUP_64.EXE". Follow the instructions to install.
3. Before you open Photo Viewer for the first time, connect the device to the USB slot. The drivers will automatically install. **Do not turn on the device while it is connected to the PC.**
4. You may see a windows dialog box automatically open saying "removable disc" with a series of questions. If this happens you can cancel out of this.

PHOTO VIEWER

1. Double Click the Photo Viewer icon on your desktop (a red and yellow donut shape) **OR** click Start -> My Computer -> Photo Viewer (folder) -> Photo Viewer (program).
2. On the left hand side of Photo Viewer, use the File Manager to search the folders on your computer for your pictures.
3. When you find a picture you want to transfer, click on that picture.
4. To send the photo to the collection panel "as is", click on the blue and white arrow at the bottom of the picture panel.
5. To edit the picture before transferring (cropping, brightness, contrast), highlight the picture and then click on the editing box just to the right of the blue and white arrow.
6. To transfer multiple pictures, hold CTRL and click on the pictures you want to transfer. To transfer an entire group, click the first photo in the series, hold SHIFT and then click on the last photo in the series. Click the leftmost arrow pointing right at the bottom of Photo Viewer to transfer the files to the Collection Panel on the right hand side.
7. **Once all your selected photos are in the collection panel, you are now ready to transfer these to your device.** To transfer

photos to the device itself, click the tab that represents the folder you want the photos in, and then click the desired photos, then the yellow button at the bottom.

EDITING PHOTOS

1. To edit a photo, highlight it in the Browse Panel on the left and click the icon next to the blue and white arrow.
2. The faint rectangle you see around the picture is the cropping tool. You can click and drag on the boxes in the corner of the rectangle to resize it. When you click DONE, the resulting picture will be everything within the bounds of the box.
3. On the bottom left, the two curved arrows shift the picture 90 degrees in either direction.
4. In the center, the slider bars control CONTRAST and BRIGHTNESS, and are previewed as you slide them. RESET sets both counters to zero.
5. Click CANCEL to return to the Browse Panel or DONE to bring the edited photo to the Collection Panel.

DEVICE FUNCTIONS

On the left side, there are two buttons and the USB port. The two buttons are:

1. POWER: Hold for 2 seconds to turn on, hold for 2 seconds to turn off.
2. DELETE: Press delete once to remove the selected file.

On the right side, there are 5 buttons. From the top, the buttons are:

1. SCROLL UP
2. SCROLL DOWN
3. ENTER: Press to confirm your selection.
4. SLIDE SHOW: To start the slide show, press this button. Keep pressing the button to select the duration that each picture is onscreen. To end the slide show, press the button again while it is playing.
5. ALBUMS: Press this button to switch between albums.