

This Keychain Digital Photo Viewer is a stand-alone device that is designed to transfer, store and display images from a PC and then display the images. Using the application software supplied with this device, you can organize, edit, enhance and download the images in your PC to this device using the provided USB cord.

QUICK START GUIDE

Before using the device, remember to charge the devices' battery for 2 hours. The battery can be charged by using either the USB cable (that connects to the PC or laptop). **DO NOT** charge device for more than 12 hours. **DO NOT** unplug the device while Photo Viewer software on your computer screen is still open.

INSTALLATION

1. Place the mini-CD in the center ring of your disc drive, then wait for the prompt to Install. If no prompt displays, go to "Start -> My Computer" and click on the disc. Click on the file "SETUP_UT1.02.EXE". Follow the instructions to install.
2. Before you open Photo Viewer for the first time, connect the device to the USB slot. The drivers will automatically install. **DO NOT** turn on the device while it is connected to the PC.

PHOTO VIEWER

1. Double Click the Photo Viewer icon on your desktop (a green and red donut shape) **OR** click Start -> My Computer -> Photo Viewer (folder) -> Photo Viewer (program).
2. There are three rows of images. From left to right, they are:
 - a. The photos that are on the device. 'IMAGES ON DEVICE'
 - b. The photos on your computer. 'BROWSE FOR IMAGES'
 - c. The photos that are going to be transferred to the device. 'NEW COLLECTION PANEL'
3. To view or delete the photos already stored in the photo viewer, use the buttons in the bottom left corner: 'VIEW PHOTOS' 'DELETE' and 'DELETE ALL'. If this is your first time using the device, use 'DELETE ALL' to remove the sample photos.
4. To add photos to the 'COLLECTION PANEL' on the right, browse for pictures you want to transfer. Click a picture and add it by clicking 'ADD TO COLLECTION PANEL' underneath.
5. To select multiple photos, hold 'CTRL' and click each photo individually. To select multiple photos in a series, click the first photo, then hold 'SHIFT', then click the last photo in the series.
6. In the rightmost panel, 'COLLECTION PANEL', click a picture and then click 'TRANSFER COLLECTION TO DEVICE' to transfer all photos to the device.

EDITING PHOTOS

1. To edit a photo, highlight it in the Browse Panel in the middle and click the 'CROP PHOTO' icon at the bottom.
2. The faint rectangle you see around the picture is the cropping tool. You can click and drag on the boxes in the corner of the rectangle to resize it. When you click DONE, the resulting picture will be everything within the bounds of the box.

3. On the bottom left, the two turning symbols shift the picture 90 degrees in either direction.
4. In the center, the slider bars control CONTRAST and BRIGHTNESS, and are previewed as you slide them. RESET sets both counters to zero.
5. Click CANCEL to return to the Browse Panel or DONE to bring the edited photo to the Collection Panel.

DEVICE FUNCTIONS

On the left side is the USB port. On the right side, there are 3 buttons. From the top, the buttons are:

1. **POWER:** Turns device on and off when held for 3 seconds. When pressed, it turns SLIDESHOW AUTO PLAY on and off.
2. **UP:** Scrolls up through pictures. When held for a few seconds, it prompts you to DELETE the selected picture. To confirm deletion, press the POWER button.
3. **DOWN:** Scrolls down through pictures. When held for a few seconds, it prompts you to DELETE ALL pictures on the device. To confirm deletion, press the POWER button.